


# Assembly Instructions




## wedi Fundo | Corner Extension

**Includes:** 1 Pc. Fundo Corner Extension Corner or  
1 Pc. Fundo Corner Extension Straight


**Installation:**

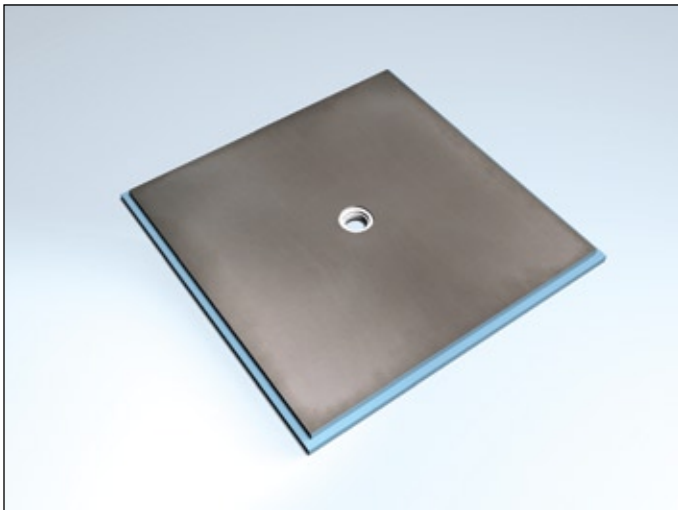


1. wedi Fundo shower base is installed around center of the shower area.

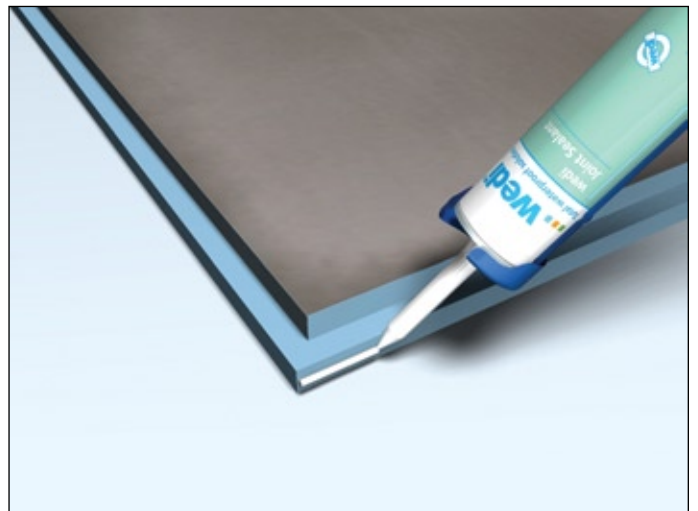


2. A ½" bead of wedi joint sealant is continuously applied on the horizontal and vertical surface area of the Fundo base channel.

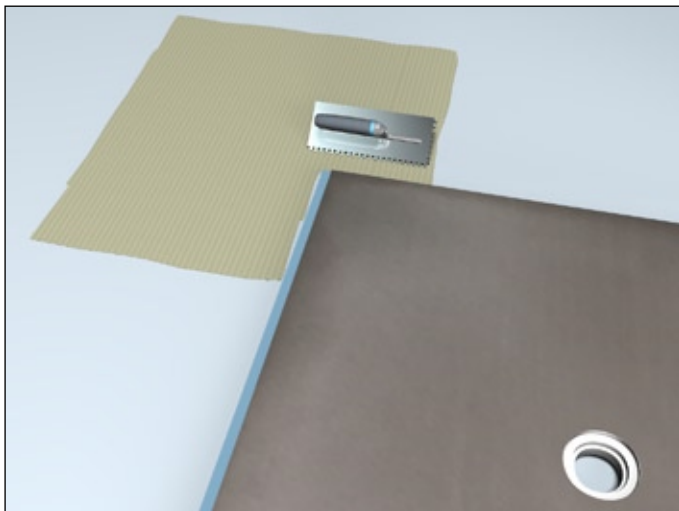


3. As when installing the Fundo base, apply a 1/2" bed of modified thinset mortar in the area where the wedi extension element will be installed. Make sure the mortar does not contaminate the wedi joint sealant.

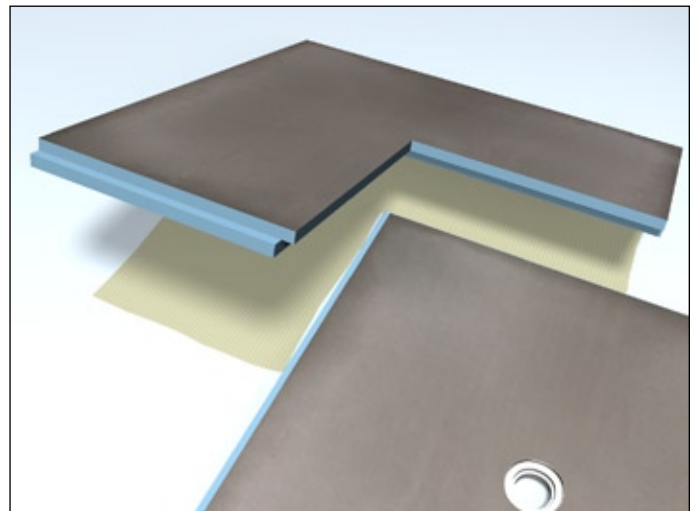

4. Here, a wedi corner extension is laid into the thinset bed and the tight shiplap connection between extension and base is made with the beads of joint sealant acting as waterproofing and adhesion promoter.

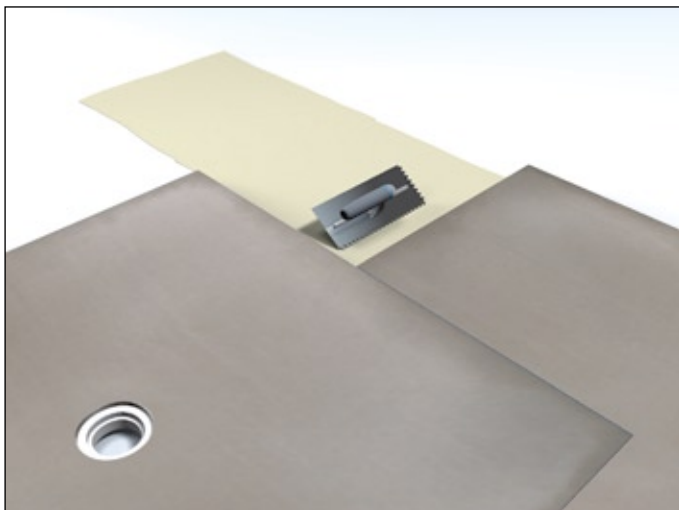


5. The straight extension elements can be used to further continue creating your tile ready, sloped shower floor in both directions of the corner. The installation procedure is identical with steps 2-4.

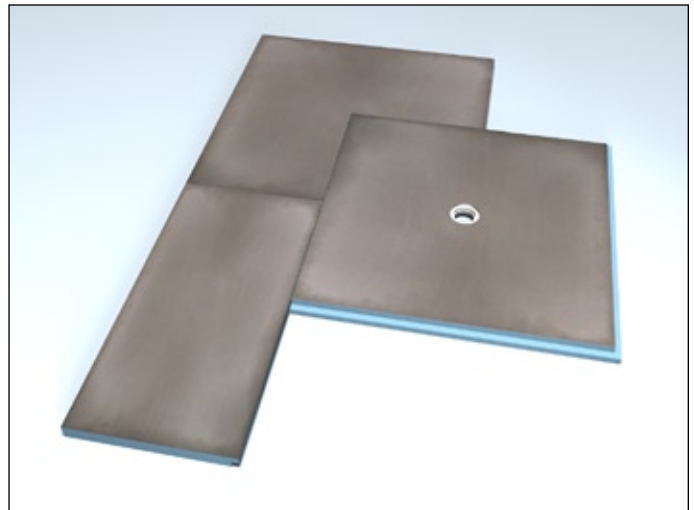

6. The side connections between corner extension and straight extension panel also offer a shiplap notch in which wedi joint sealant is applied as described in step 2.

7. The straight extension is now properly embedded in modified thinset mortar and tightly sealed and connected to the Fundo base and the corner extension panel.

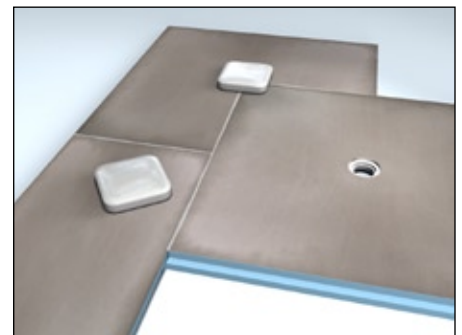

8. Finally, a continuous 1/2" bead of wedi joint sealant is applied over all surface connection joints and spread over the joints using a putty knife. Weights are applied equally over the shower floor to promote a firmer bond with the thinset mortar on the floor and to enable you to continue working on the shower walls immediately.



**wedi Corporation**

1100 Landmeier Road, Suite 200 • Elk Grove Village, IL 60007

Tel. 877-933-WEDI (9334) • Fax. 847-357-9819

info@wedincorp.com • www.wedincorp.com